




Koala x Bruce


What's in the box*

*Not to scale

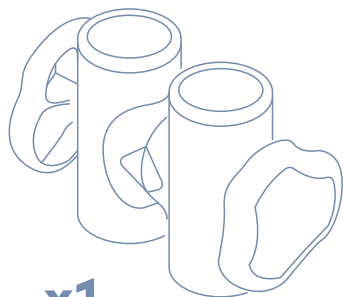


x1

Gumnuts and hinges

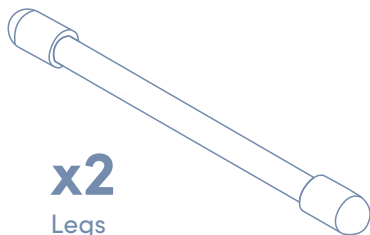


x2

Legs

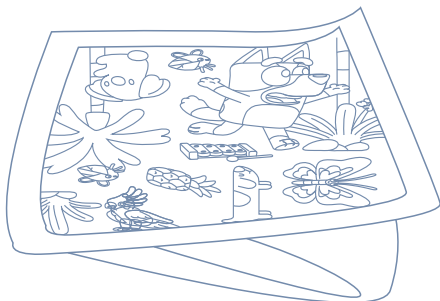

x2

 
Tent canopy




x2

Tent poles


- 1.** Loosen the gumnuts to separate the gumnuts and hinges completely.

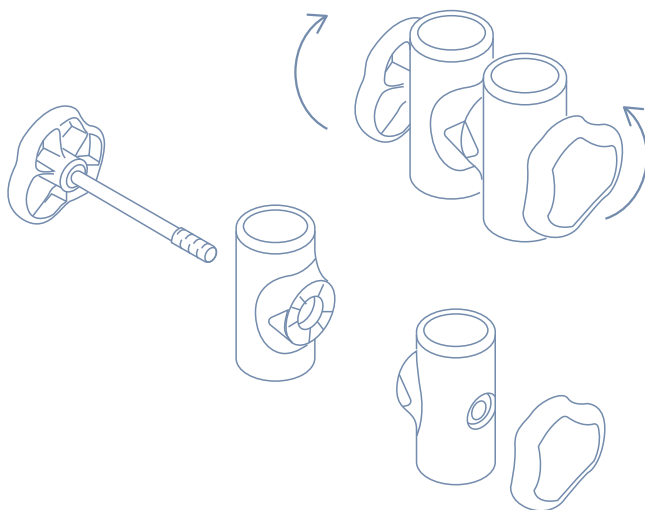


- 2.** Take one hinge and slide it over the top of the tent pole so that the holes align and then put the thread of the gumnut through the hole.

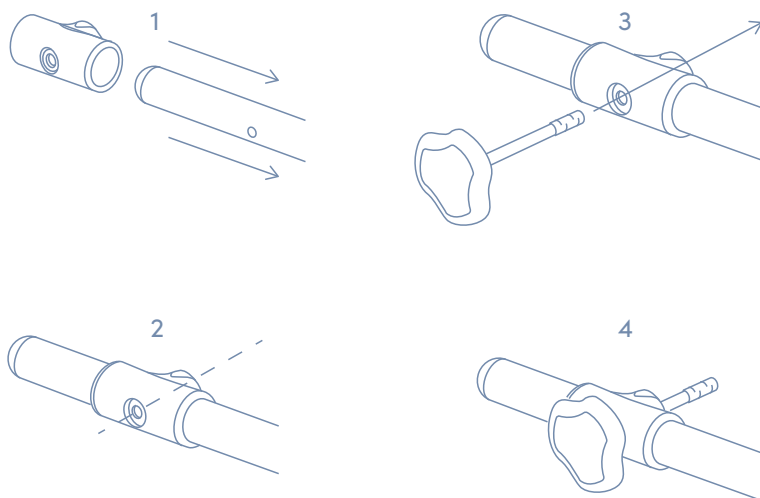

- 3.** Take the other hinge and slide it over the second tent pole so that the holes align.

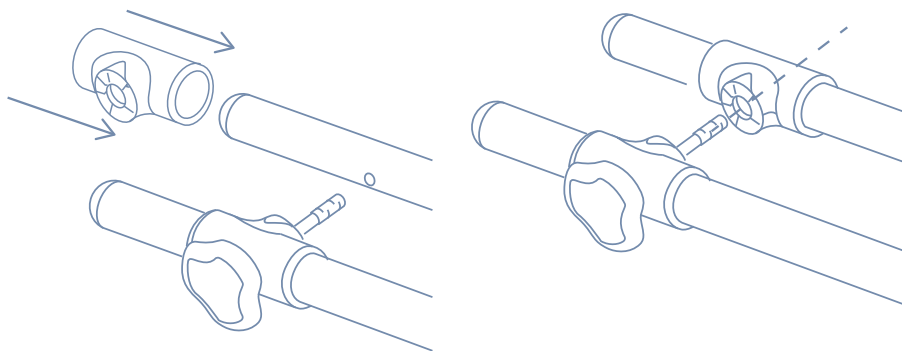


-
- 4.** Slide the threaded gumnut through the hole on the second tent post. Ensure the teeth are facing each other.

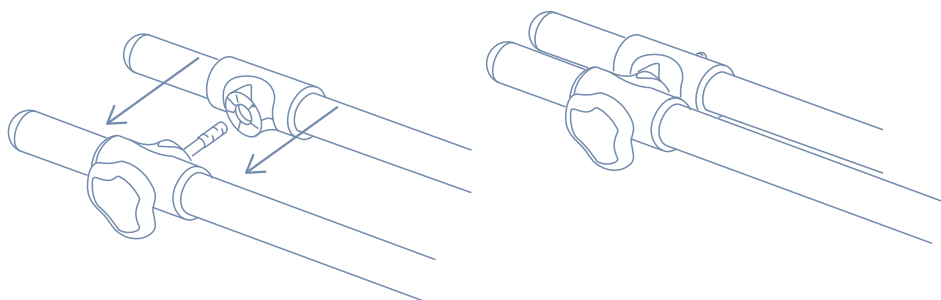




- 5.** Using the non-threaded gumnut, screw it onto the visible thread. Do not tighten fully.



-
- 6.** Take the leg and remove one of the soft plastic end caps. Repeat for the other leg.

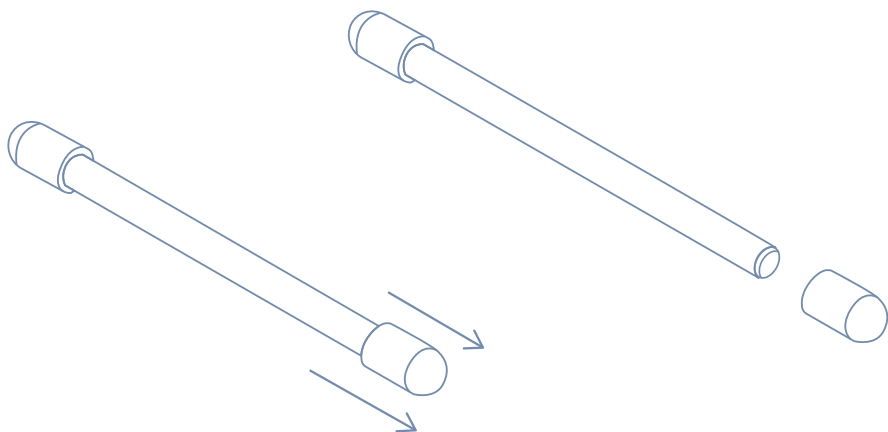


- 7.** Slide the leg through the T-joint and re-attach the end cap on the other side. Repeat for both legs.

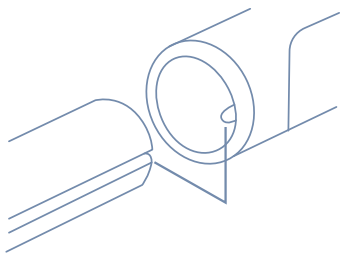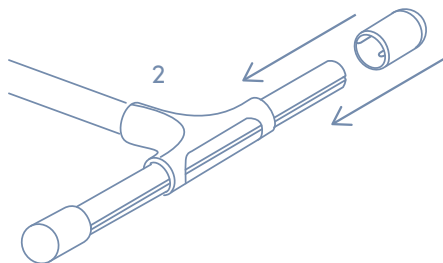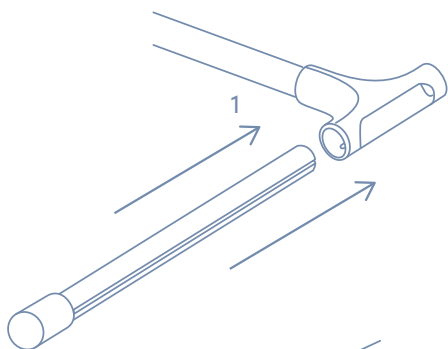


Heads up:
the groove and tab should align


- 8.** Adjust the angle of the tent to fit the sofa bed and tighten the gumnuts to lock in place.

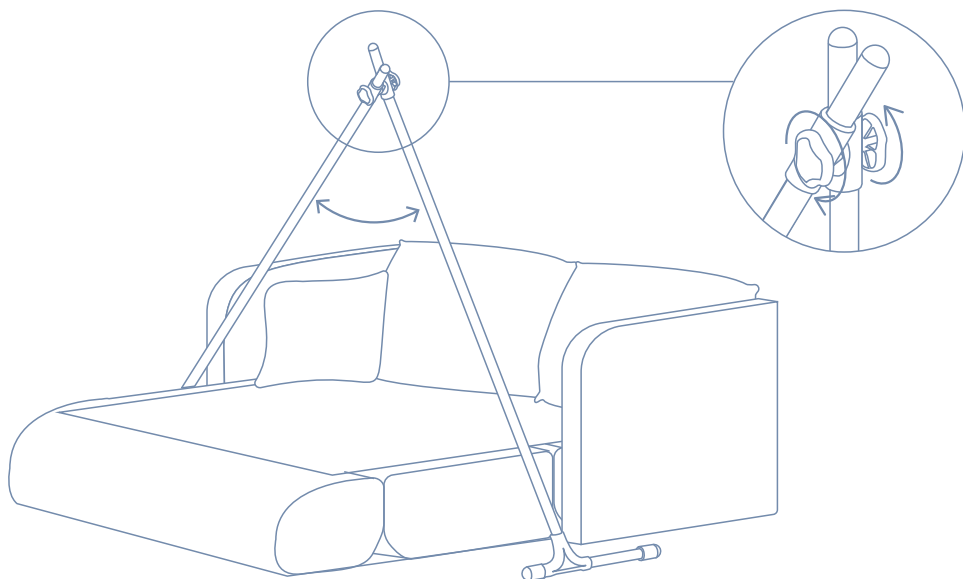

- 9.** Push the tent frame against the arms of the sofaed. Ensure the long side of the legs are facing the sofaed

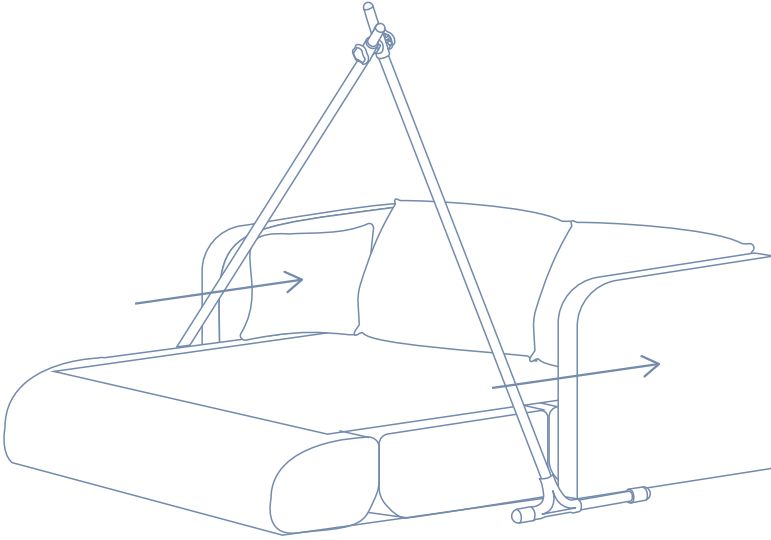

- 10.** Using the hole in the corner of the tent canopy, secure it to the tent pole. Repeat for the other side.

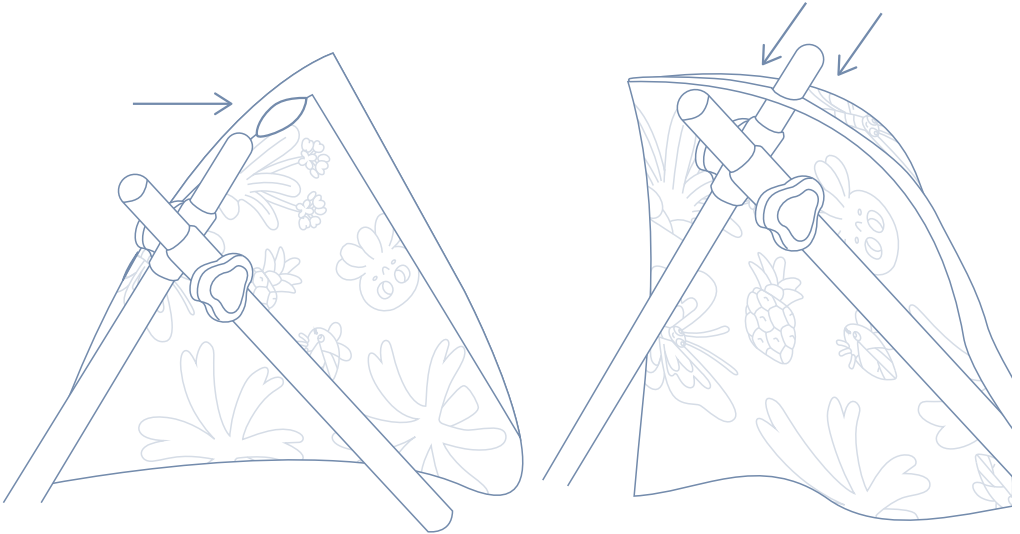

11. Playtime!



Care & maintenance

Tent Frame:

- Dust surface with a dry cloth or duster in the direction of the natural grain
- Avoid abrasive materials, strong chemicals, or silicone-based wood polishes
- Protect from direct sunlight
- Check and retighten gumnuts before each use. Inspect the general condition and safety of the product

Tent Canopy:

- Cold gentle machine wash with similar colours
- Do not bleach
- Do not tumble dry
- Line dry in shade
- Do not iron
- Do not dry clean
- Sharp objects can cause snags or damage to the tent canopy

WARNINGS & SUPERVISION

SUITABLE FOR AGES 3+

WARNING: THIS TENT FRAME IS ONLY INTENDED TO BE USED WITH THE PROVIDED CANOPY. ADULT ASSEMBLY REQUIRED. IMPROPER ASSEMBLY OR USE CAN LEAD TO SERIOUS INJURY.

WARNING: DO NOT USE THE BED IF ANY PARTS ARE BROKEN, TORN OR MISSING AND USE ONLY SPARE PARTS APPROVED BY THE MANUFACTURER.


CAUTION: BE MINDFUL WHEN ADDING DECORATIONS, SUCH AS FAIRY LIGHTS, WHICH CAN POSE A STRANGULATION OR ENTRAPMENT RISK.

CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF PRODUCT. RETAIN THE ASSEMBLY INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT IS DESIGNED FOR INDOOR USE ONLY. TENT SHOULD BE SET UP ON A FLAT, EVEN SURFACE BEFORE USE. ALWAYS FOLLOW ASSEMBLY INSTRUCTIONS.

ALL ASSEMBLY FITTINGS SHOULD ALWAYS BE TIGHTENED PROPERLY AND FITTINGS SHOULD BE CHECKED REGULARLY AND RE-TIGHTENED AS NECESSARY.

WARNING: KEEP CANOPY AWAY FROM FIRE AND OTHER SOURCES OF STRONG HEAT, SUCH AS ELECTRIC BARS OR GAS FIRES.

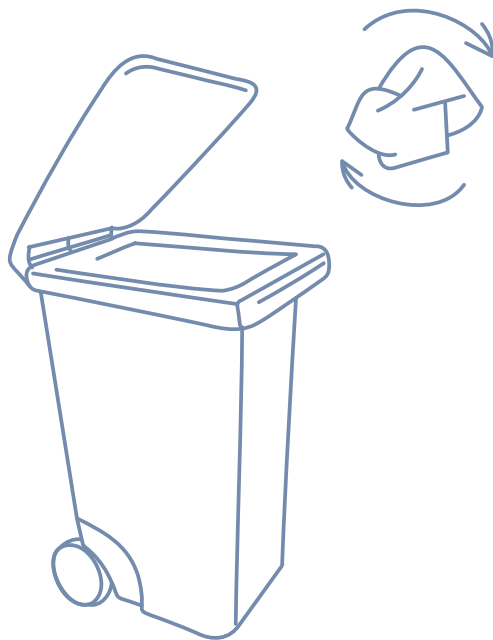

Don't forget to recycle.



BBC
STUDIOS

ko'ala

BLUEY TM and BLUEY character logos TM & © Ludo Studio Pty Ltd 2018.
Licensed by BBC Studios, BBC logo TM & © BBC 1996



MIX
Paper | Supporting
responsible forestry
FSC® C200802